
Creativeskin® Panel

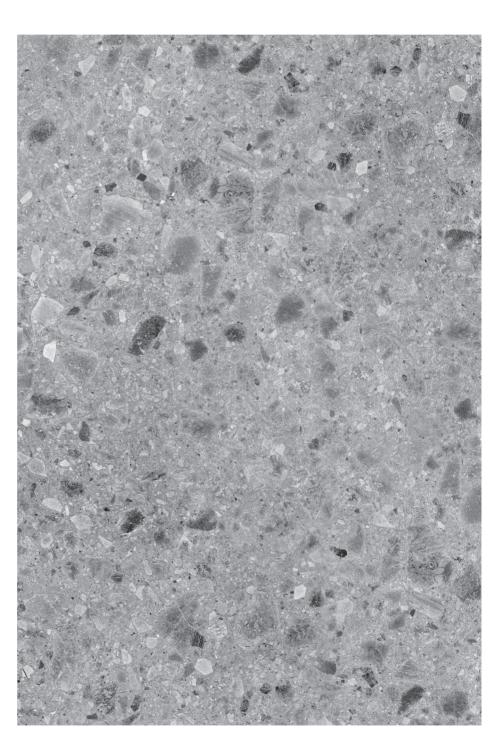

Nuovvo

TECHNICAL DATA SHEET

Nuovvo panels are the ideal solution for covering the shower area with the same texture and material as the resin shower tray. Available in a wide range of sizes, this shower panel is the perfect complement to achieve a uniform and refined look in the bathroom. It can be used not only in the bathroom but also in any other indoor or even outdoor space, thanks to its high resistance.

Material:

Nuovvotech V combines silica-free mineral filler with our polyurethane resin, resulting in an innovative material that, thanks to its polyurethane base, ensures a safe and durable solution for the bathroom without the need for a gel coat layer.

Nuovvotech V offers high-definition textures and vibrant colours.



Properties:


- · Lightweight 6 mm thick panel with different textures available.
- 100% waterproof, no membrane required.
- · UV protection.
- Can be easily cut with a diamond blade.
- Its thickness allows it to be flexible and adapt to wall irregularities, and its cuttability makes it perfect for installation in areas such as columns or protrusions.
- Can be installed without the need for aluminium profiles or trims.

<u>٥</u> ,	Water-repelent surface	<u></u>	Flush installation or click-clack system	Large format
	Antibacterial		2-Year Warranty	Made in Spain
Si j	Silica-free material		Lightweight product	Versatility in composition
F	Easy to clean	\bigcirc	Customisable	

Measures:

Our products are fully customisable in both width and length. The customer can provide a technical drawing when placing the order to receive the tray perfectly cut to the desired dimensions.

Colours and textures

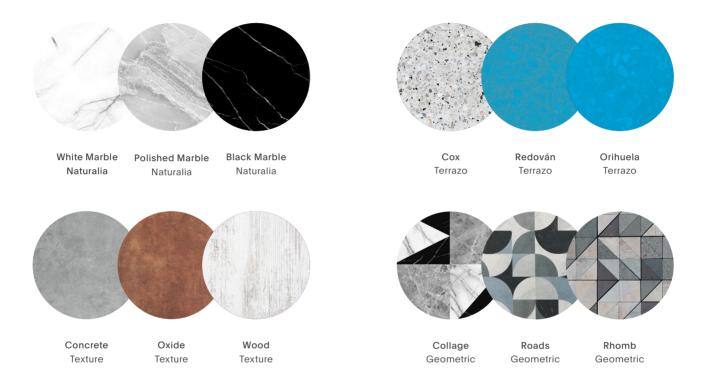




Creativeskin® White Marble panel

Quality certifications

Analysis and testing carried out at the AIDIMME Technological Institute. All our products are certified for use at the European level.

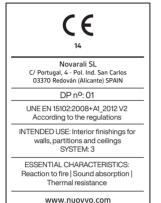







• Use and maintenance:

- Clean regularly, rinsing thoroughly and ensuring no cleaning product residues remain.
- Use a soft cloth or wipe to clean the surface.
- · Avoid regular cleaning with bleach, alcohols, acids, nail polish removers, lacquers and/or abrasive products.
- Do not use sodium hydroxide (caustic soda) or hair dyes due to their high methylene blue concentration.

Nuovvo



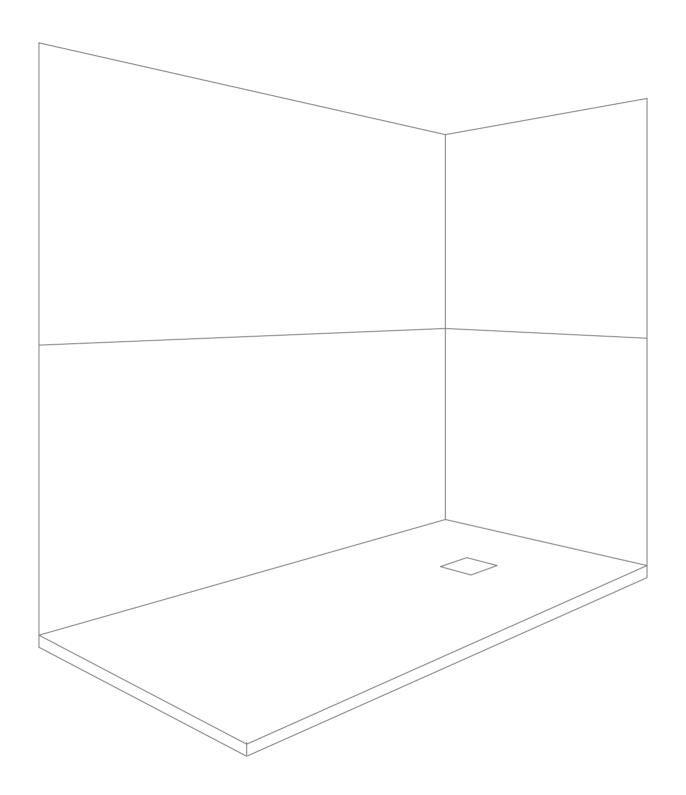



NOVARALI, S.L. C/ Portugal, 4 P.I. San Carlos 03370 Redován, Alicante, Spain T. +34 965 681 207 info@nuovvo.com www.nuovvo.com